



Operation and safety instructions

SAFETY INSTRUCTIONS FOR ALL TYPES

Do not operate the device if ...
 ... the supply cable is damaged
 ... the device was dropped
 ... or has any visual damage
 ... the device is overheating
 or temperature is not controllable anymore
 ... the device is covered »**FIRE HAZARD!!**

MALFUNCTIONS

In case of overheating a built-in overheat-protection will cut the power supply to the heater. Despite this you should only operate the device under supervision
 In the event of faults or defects contact your local dealer or our customer service:
 phone: +497151/41046 or
 Via Mail: mail@deyle-power.de

MAINTENANCE AND REPAIR


No special maintenance required.
 During warranty period the device must only be repaired by our customer service! Otherwise the warranty will become void!

Cleaning

Always remove the plug before cleaning!

User manual

For further information please refer to the user manual

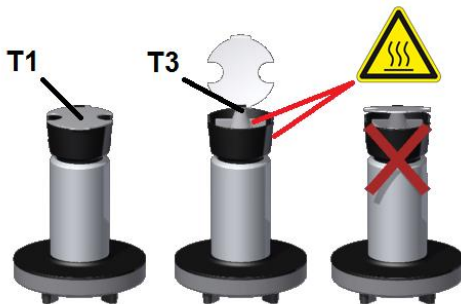


Passat [25]

temperature	T1	T3
150°	55"	30"
180°	115"	55"

»ATTENTION:

If you use the jet do not close the cover!
 It could bend due to overheating.

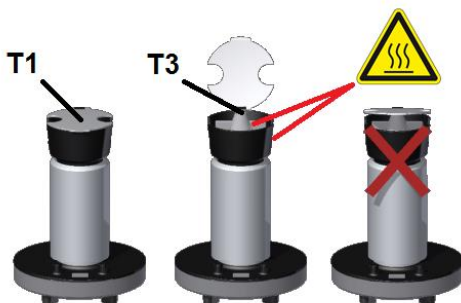

Passat [32]

temperature	T1	T3
150°	30"	20"
180°	50"	25"

T1 ... temperature in the middle of the beaker
 T3 ... temperature above jet

The indicated temperatures are measured at the specific points T1 to T3
 The charts show the heating times in seconds (")

Different metering points or ambient temperatures may lead to different heating times. Mains voltage fluctuations can cause temperature fluctuations of the device